




MADE IN ITALY

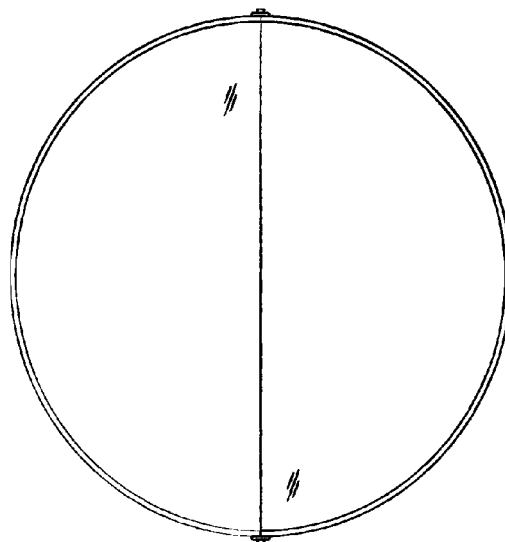

SPECCHIO - PERIS - MIRROR

PERIS Pietro Russo




46 x 11 h 52
Specchio / Mirror

$\frac{52\text{cm}}{20\frac{1}{4}}"$



$\frac{11\text{cm}}{4\frac{1}{4}}"$



$\frac{46\text{cm}}{18}"$



$\frac{11\text{cm}}{4\frac{1}{4}}"$


$\frac{46\text{cm}}{18}"$

120 x 11 h 124
Specchio / Mirror

$\frac{124\text{cm}}{48\frac{1}{4}}"$



$\frac{11\text{cm}}{4\frac{1}{4}}"$

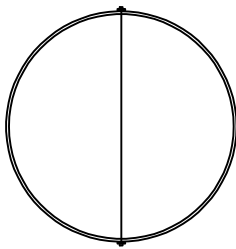

$\frac{120\text{cm}}{46\frac{3}{4}}"$



$\frac{11\text{cm}}{4\frac{1}{4}}"$

$\frac{120\text{cm}}{46\frac{3}{4}}"$

COMPONENTI

n° 01 - Specchio

n° 01 - Staffa in metallo

n° 02 - Perno in ottone 6 x 23 mm

n° 02 - Rondella in Teflon sp. 3 mm

n° 03 - Fischer da muro

n° 03 - Vite da legno nera a testa svasata 4 x 50 mm

COMPONENTS

n° 01 - Mirror

n° 01 - Metal support

n° 02 - Brass pin 6 x 23 mm

n° 02 - Teflon Washer 3 mm thick

n° 03 - Wall fischer

n° 03 - Black wood flared head screw 4 x 50 mm

1

Fissare la staffa in metallo a muro con i fischer e le viti da legno.

(Figura 1 - Fase 1)

Fix the metal support to the wall by the wall fischer and wood screws.

(Picture 1 - Step 1)

Posizionare lo specchio nella sua sede. Fissare lo specchio al suo supporto tramite i perni in ottone e le rondelle in teflon.

(Figura 2 - Fase 2)

Locate the mirror in its position. Fasten the mirror to its support using the brass pins and the teflon washers.

(Picture 2 - Step 2)

Montaggio Completato. (Figura 3 - Fase 3)

Assembly completed. (Picture 3 - Step 3)

Figura 1 - Picture 1

Fase 1 - Step 1

Vista laterale / Lateral view

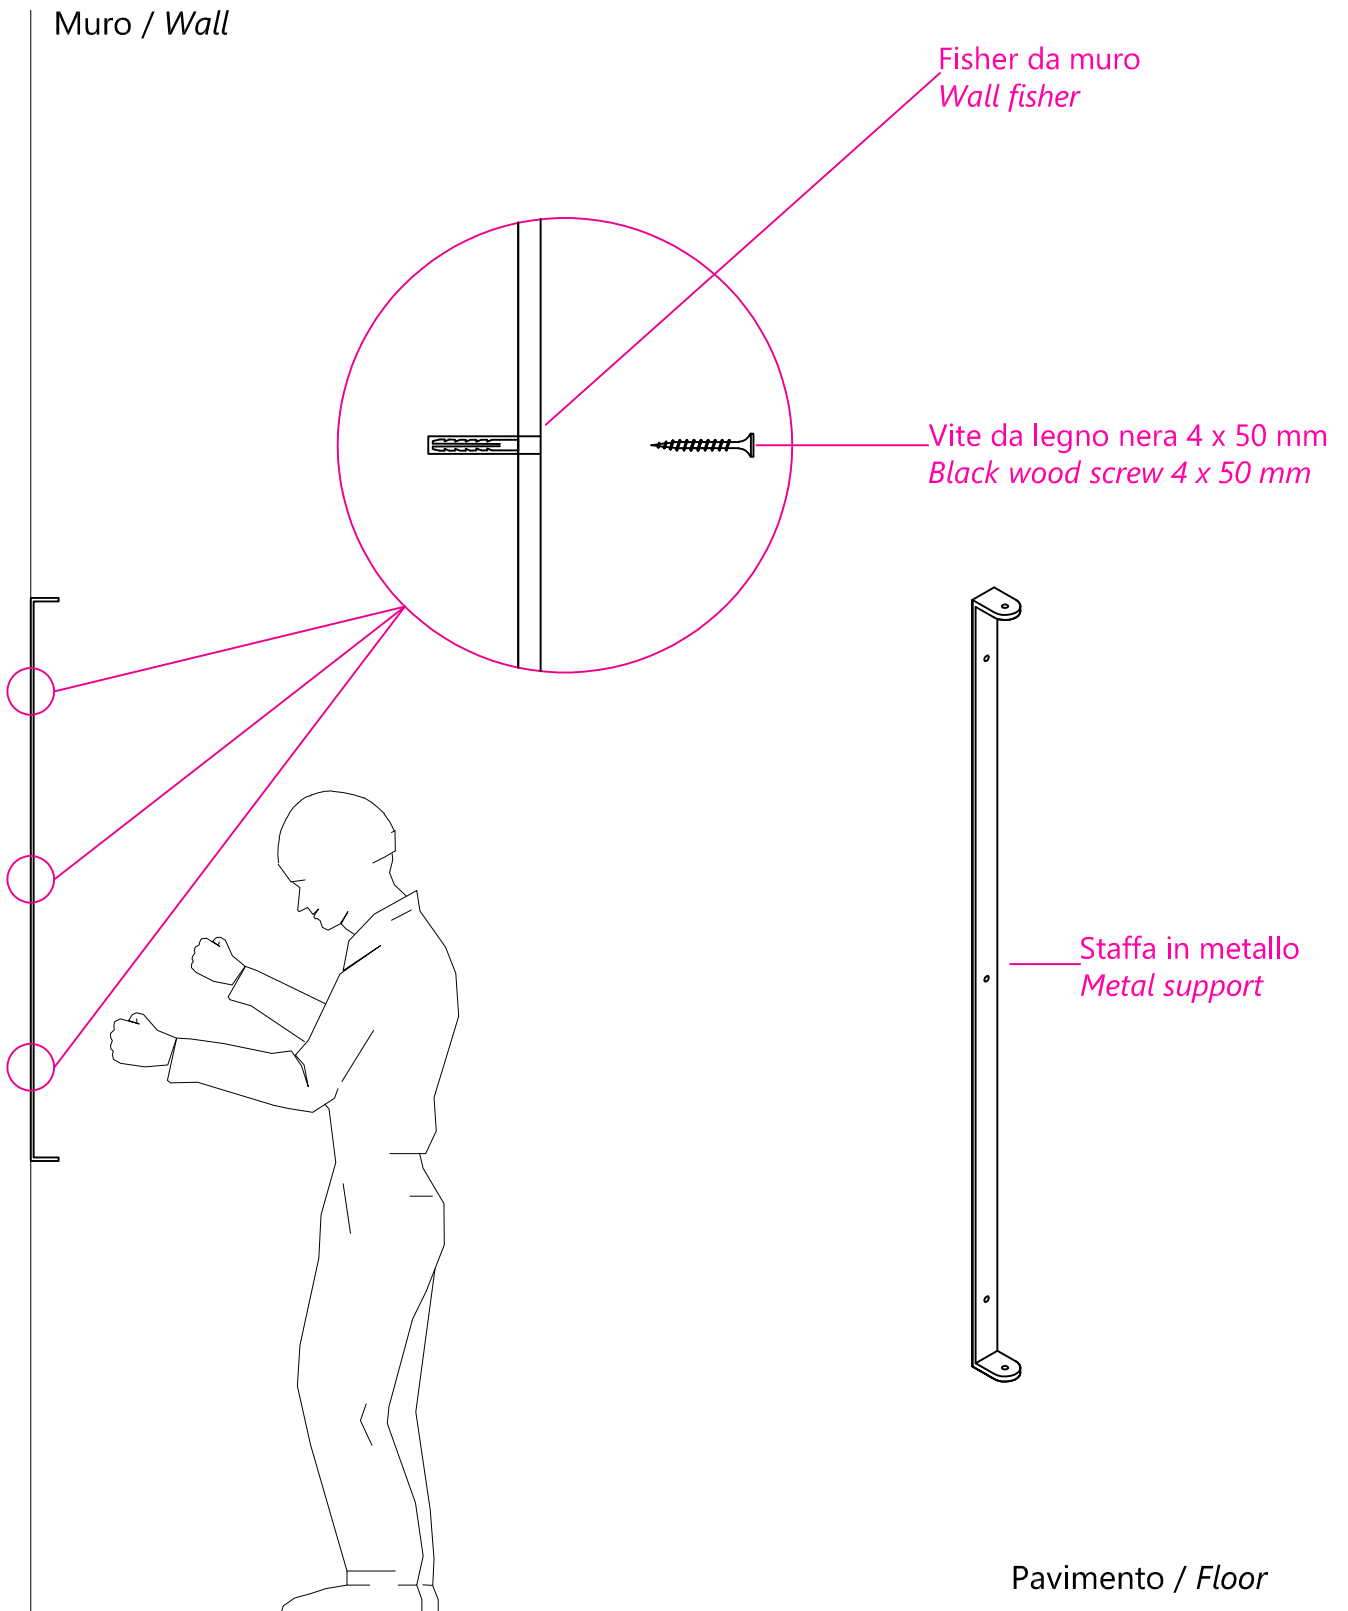


Figura 2 - Picture 2

Fase 2 - Step 2

Assonometria / Isometric view

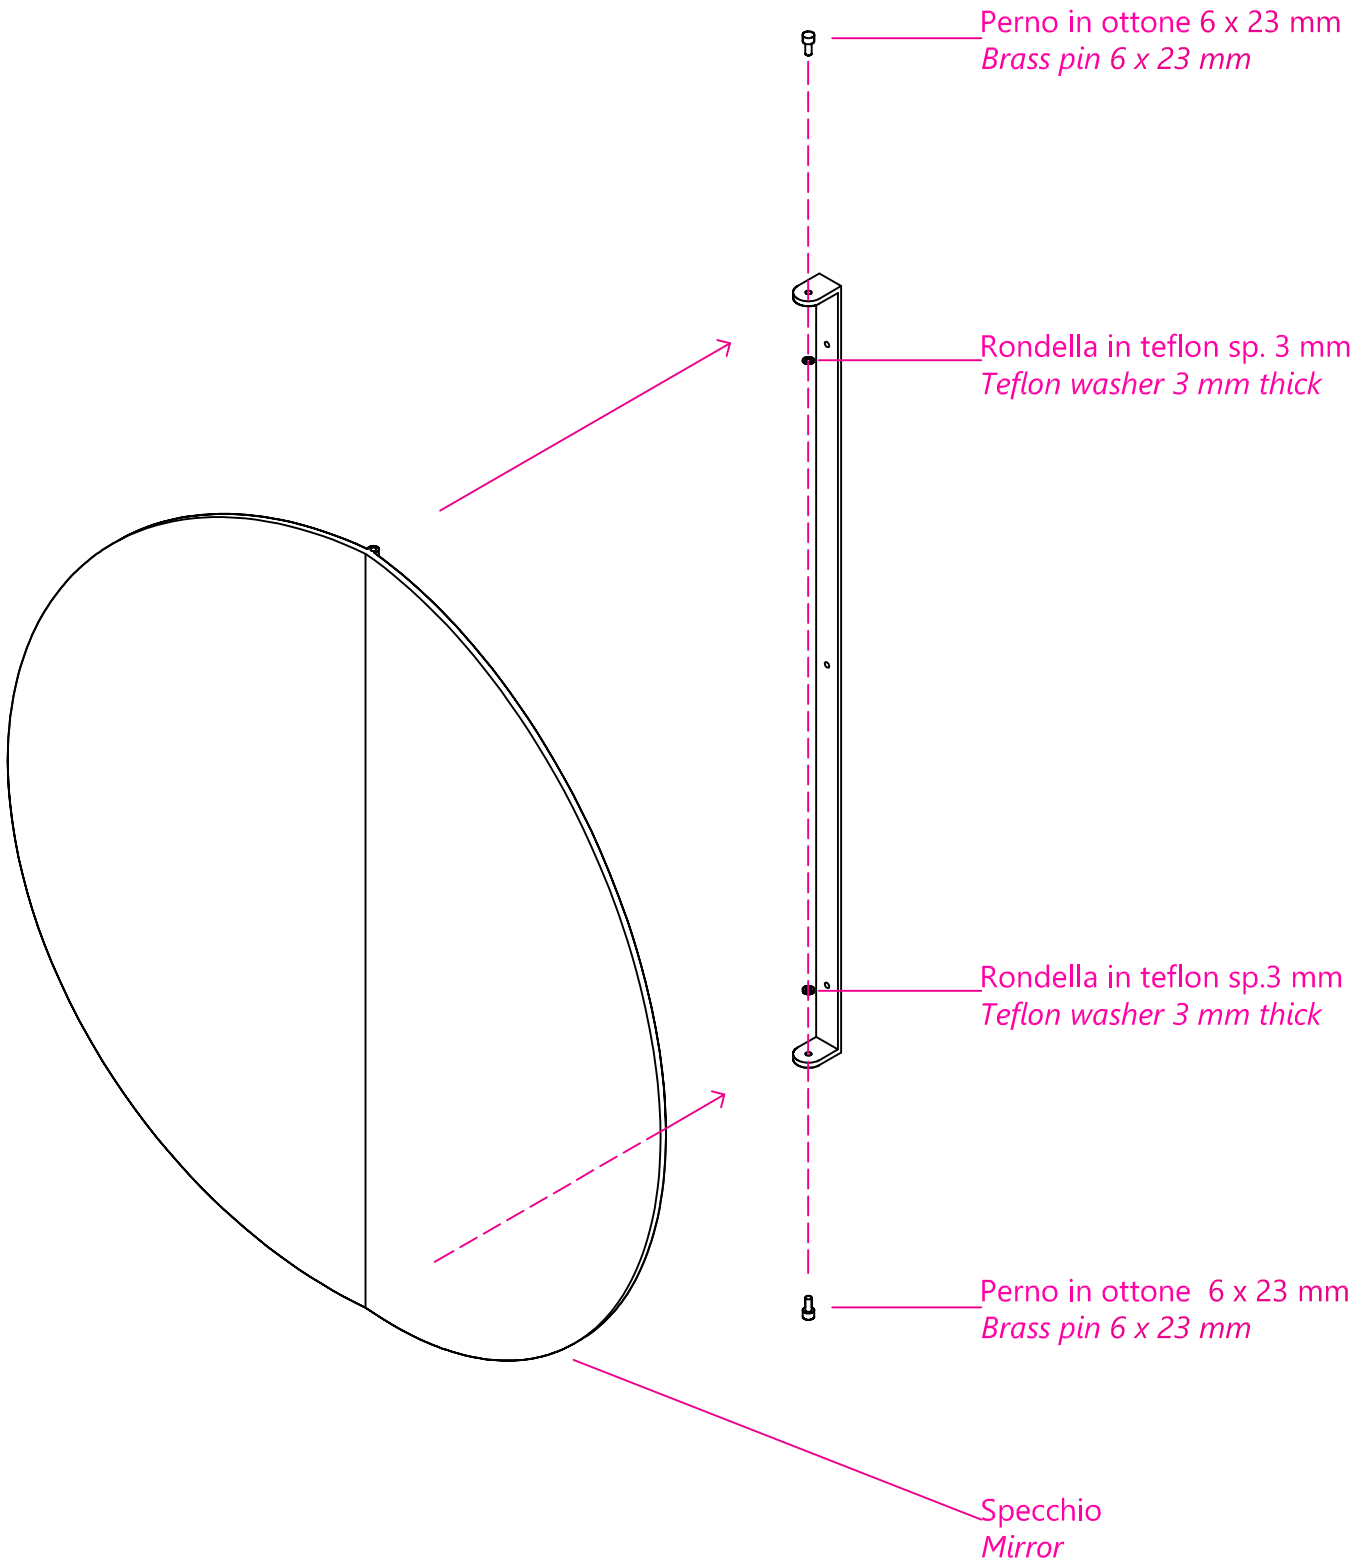


Figura 3 - Picture 3

Fase 3 - Step 3

Vista laterale / *Lateral view*

